


SCHNEIDER

SCHNEIDER

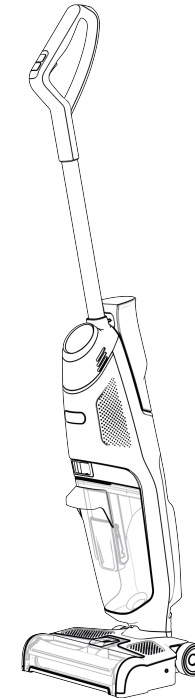

(若图片与实物不符，具体请以实物为准)

(If the picture is not consistent with the real object,  
please refer to the real object)

SCHNEIDER CONSUMER IP

法国SCHNEIDER(中国)品牌运营方

广州科隆家居品牌管理有限公司

- SCHNEIDER(中国)官网: [www.schneiderhome.cn](http://www.schneiderhome.cn)

- 服务热线: 400-601-8998

- 地址: 广州市花都区迎宾大道95号



微信公众号

XDJ-001B、XDJ-001L 吸拖一体机 (带真空吸尘器功能) 使用说明书  
XDJ-001B、XDJ-001L Cordless Wet Dry Upright Vacuum and Mop Cleaner operating manual

## 感谢您的使用

尊敬的客户：

感谢您购买SCHNEIDER品牌家用清洁电器——洗地机。

在此,本公司全体同仁向您致以真挚的谢意,祝您使用愉快!

请认真阅读此说明书,因为其中的信息可让您了解如何安全、正确的操作产品,并从中获得最理想的使用效果。

此说明书包括截止印刷时的最新信息,本公司全权负责该手册的修订、解释及说明。本公司的策略是不断对产品进行改善,因此本公司保留说明书印刷后更改产品而不另行通知的权利。

在使用过程中如果您对本公司产品有疑问或建议,欢迎拨打我们的服务热线:400-601-8998,我们将竭诚为您服务!

一、感谢您的使用	01
二、目录	01
三、安全警告注意事项	03
四、产品图示	06
五、产品技术特点	07
六、产品组装	08
七、充电与自清洁	11
八、清洁方法	12
九、产品规格	13
十、有害物质成份表	15
十一、服务条款	16
十二、产品保修卡	17

## Thank you for your use

Dear customers:

Thank you for purchasing Schneider brand household cleaning appliance - floor washer.

Here, all colleagues of our company extend sincere thanks to you and wish you a happy use!

Please read this manual carefully, because the information in it can help you understand how to operate the product safely and correctly, and get the best use result.

This manual includes the latest information up to the time of printing. Our company is fully responsible for the revision, interpretation and explanation of this manual. The company's strategy is to continuously improve the products, so the company reserves the right to change the products after printing without notice.

If you have any questions or suggestions about our products, please call our service hotline: 400-601-8998. We will serve you wholeheartedly!

一、KNOW YOUR VACUUM CLEANER	19
二、INSTALI ATION OF THE APPLIANCE	20
三、INSTALLATION FORTHE ROLLER BRUSH	21
四、OPERATION	23
五、PRODUCT SPECIFICATION	26
六、TROUBLESHOOTING	27
七、TERMS OF SERVICE	29
八、WARRANTY CARD	30

### 安全注意事项

#### ⚠ 注意

为降低火灾、电击或伤害风险，请遵照以下要求操作：

- 1、本装置可由8岁及以上的儿童，以及身体、感官或心智机能不健全者或者缺乏经验和了解的人员使用，但前提是要有人监护他们，或告知他们本装置的安全使用方法及相关危险。在无人监护的情况下，不得由儿童执行清洁和用户维护操作；
- 2、应监护好儿童，确保其不会玩耍本装置；
- 3、在不使用时和清洁、维护或维修本装置之前，请拔下电源插座上的插头，且如果你的装置配有带活动电刷的辅助工具，请在连接或断开该工具之前拔下插头；①切勿浸入水中或液体中；
- 4、确保头发、宽松的衣服、手指以及身体的各个部位远离本装置的开口和运动部件及其配件；
- 5、切勿使用损坏的电缆或插头；
- 6、如果充电器电源线损坏，必须由制造商及其维修机构或类似有资格的人员更换，以免发生危险；
- 7、请勿焚烧本装置，即使严重损毁也不要进行焚烧。电池在火中可能发生爆炸；
- 8、请安全弃置电池；
- 9、本装置所含的电池仅可由经过专门训练的人员进行更换；
- 10、在过于用力的情况下，可能会有液体从电池中溅出，请避免接触，如果意外发生接触，请用水冲洗。如果液体接触眼睛，请另外寻求医疗帮助。从电池中溅出的液体可能会引起疼痛或灼伤；
- 11、仅使用由制造商指定的充电器充电。适用于某一类电池组的充电器与另一类电池组混用时可导致火灾；
- 12、在不使用时和清洁、维护或维修本装置之前，请将充电器从电源插座上拔下，如果你的装置配有带活动电刷的辅助工具，请在连接或断开该工具之前拔下插头；
- 13、在弃置之前，必须将电池从装置中取出；
- 14、切勿使用损坏的电源线或充电器。如果本装置无法正常工作、曾掉落在地上、已损坏、曾置于室外或掉落在水中，请将其送至维修中心；
- 15、拔下插头之前，请先关闭所有控制器；
- 16、仅使用本手册操作部分所规定的液体类型，且用量要符合规定；
- 17、不得将液体导入到包含电气部件的设备中；

### 安全注意事项

#### ⚠ 注意

- 18、务必连接至正确接地的电源插座。切勿改装接地插头；
- 19、切勿拽拉充电器电缆或通过电缆提起设备，切勿将电缆用作把手，切勿在关门时夹住电缆，切勿在锋利的边缘或拐角区域拽拉电缆；
- 20、确保充电器电缆远离受热表面；
- 21、要拔下插头，请捏住充电器插头，而不是电缆；
- 22、切勿用湿手握持充电器插头或本装置；
- 23、勿使电池组或充电器底座输出端子短路；
- 24、请勿在室外为装置充电；
- 25、拆卸电池时，必须断开本装置的电源；
- 26、切勿对废弃的电池进行充电、拆解、加热（至60°C以上）或焚烧；
- 27、请将电池放在儿童接触不到的地方；
- 28、请及时处理废弃的电池；
- 29、切勿将电池放入口中。如被误吞，请联系你的内科医生或当地的中毒控制中心；
- 30、预防意外启动。在提起或搬运本装置之前，请确保开关处于关闭位置。在搬运本装置时将手指放在开关部位，或者在开关处于启动位置时通电可导致事故；
- 31、请勿使用损坏或改装过的装置。损坏或改装过的电池可能会出现不可预知的行为，进而导致火灾、爆炸或受伤的危险；
- 32、请勿将装置暴露于火焰或过高的温度，暴露于火焰或130°C以上的温度可导致爆炸；
- 33、请遵照所有的充电说明操作，切勿在说明中制定的温度范围之外给本装置充电。充电不当或在指定温度范围之外进行充电可导致电池损坏并增加火灾的风险；
- 34、让有资质的维修人员来执行维修工作，并且只使用相同的备件。这样可持续保产品安全；
- 35、除非使用和保养须知中明确说明，请勿改装或试图自行维修本装置；
- 36、在电池充电、装置存放或装置使用期间，请保持温度在4-40°C之间；
- 37、塑料薄膜可导致危险。应让儿童远离塑料薄膜，以免发生窒息；
- 38、务必按本使用手册中的规定使用本装置；
- 39、务必使用制造商推荐的配件；
- 40、如果本装置无法正常工作、曾掉落在地上、已损坏、曾置于室外或掉落在水中，请勿尝试进行操作，而是将其送至授权维修中心进行修理；


## 安全注意事项

### ⚠ 注意

- 41、切勿将任何物体放入开口中；
- 42、切勿在开口堵塞的情况下使用,确保无灰尘、棉绒、头发或任何可能减小气流的物体；
- 43、清扫楼梯时应额外小心；
- 44、切勿用于扫除易燃或可燃液体（例如汽油），或者在可能存在易燃或可燃液体的区域使用本装置；
- 45、切勿用于扫除有毒物质（下水道清洗剂、氨水、漂白剂）；
- 46、切勿在充满油性漆所发出的蒸汽、油漆稀释剂或某些防蛀性物质、可燃性粉尘或其他爆炸性或有毒蒸汽的密闭空间内使用本装置；
- 47、切勿用于扫除坚硬或尖锐物品，例如玻璃、钉子、螺丝、硬币等；
- 48、请勿用于扫除正在燃烧或冒烟的物体，例如香烟、火柴；
- 49、将滤网安装好后再使用；
- 50、请勿在室外使用；
- 51、请勿存放于可能发生结冰的地方；
- 52、如果装置配有刷辐且把手未完全垂直，请勿在同一位置使用本装置；
- 53、确保将本装置放在水平表面上；

## 产品示图（整机）

### 机身组件

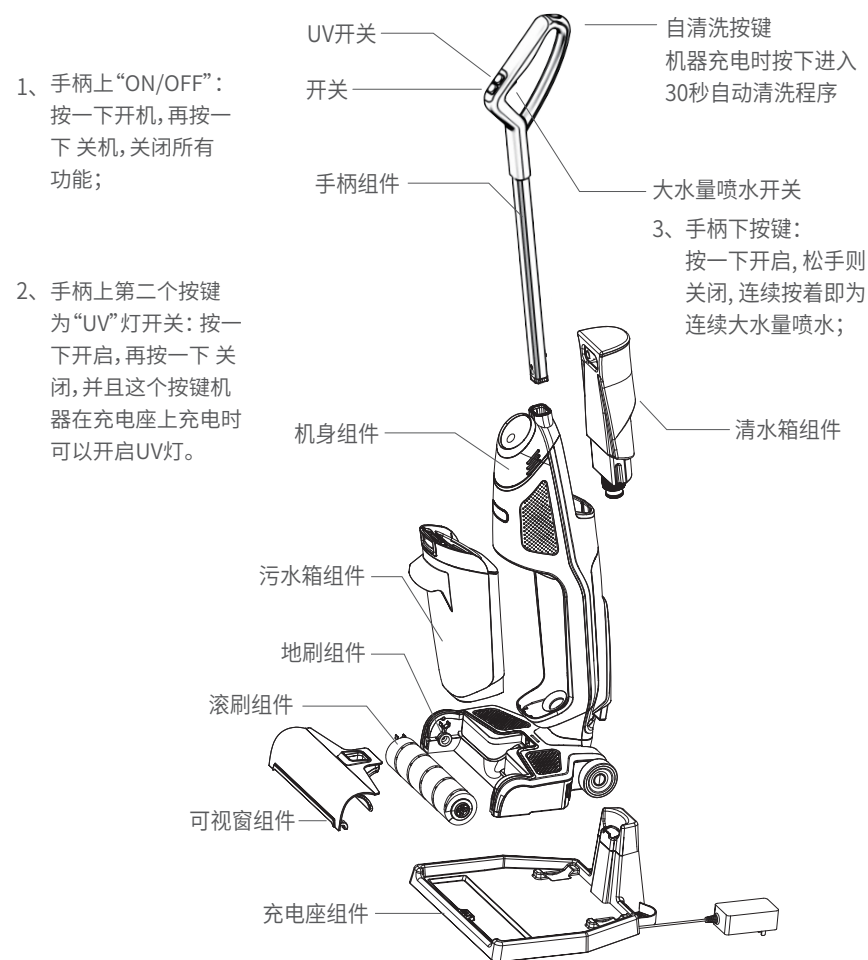



产品技术特点

产品同时具有UV紫外线杀菌、表面清洁、吸尘三种功能。

1、UV紫外线杀菌

冷阴极紫外线杀菌灯，利用紫外线辐射被清洁表面实现杀菌功能。

2、表面清洁


产品设有清水箱、污水箱、滚刷、吸力电机、滚刷电机,利用水泵抽水到滚刷表面，同时利用滚刷电机带动滚刷高速旋转，清洁后污水与小颗粒垃圾利用吸力电机回收收到污水箱，实现地板表面清洁功能。

3、强力真空吸尘

强力吸尘：能够吸入家庭每个角落灰尘，干、湿功能可根据地板表面脏污程度随意切换。

产品组装

地刷组件（仰视图）

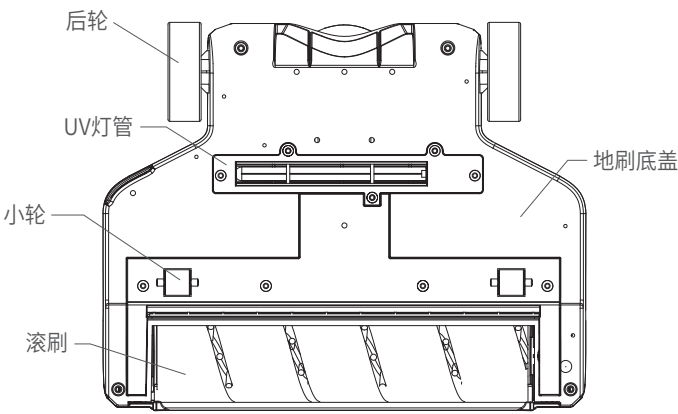

产品组装

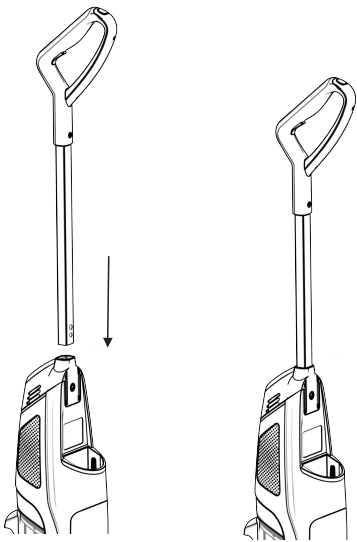


图4-1

图4-2

本装置尺寸较大,为方便运输和储存,充电座组件、手柄组件与机身部分拆开包装,用户在首次使用时请按下述步骤。


4-1机身与手柄组件的组装

把手柄组件按图4-1所示方向插入机身对应顶部位置,内设有卡扣定位,插入后听到“咔”一声后即完成组装如图4-2。

## 产品组装


### 机身与清水箱组件的组装

把清水箱组件按图4-3所示逆时针方向旋转瓶盖,按图4-4所示加入纯净水(注意不能超过水箱标注最大水位),后按图4-5所示顺时针方向旋紧瓶盖,装水完成后按图4-6所示把清水箱组件插入机身对应位置(瓶盖朝下),内设有卡扣定位,插入后听到“咔”一声后即完成组装如图4-7。

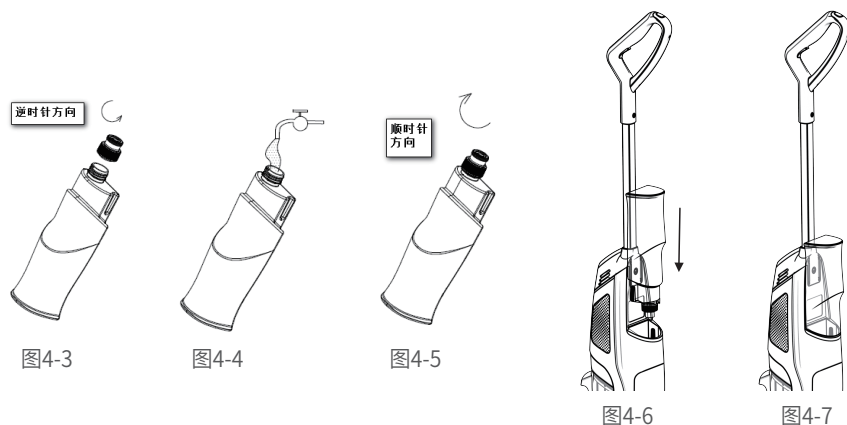

### 机身与污水箱组件的组装


把污水箱组件按图4-8所示方向插入机身对应位置(图片所示),污水箱组件设有卡扣定位,插入后听到“咔”一声后即完成组装如图4-9。

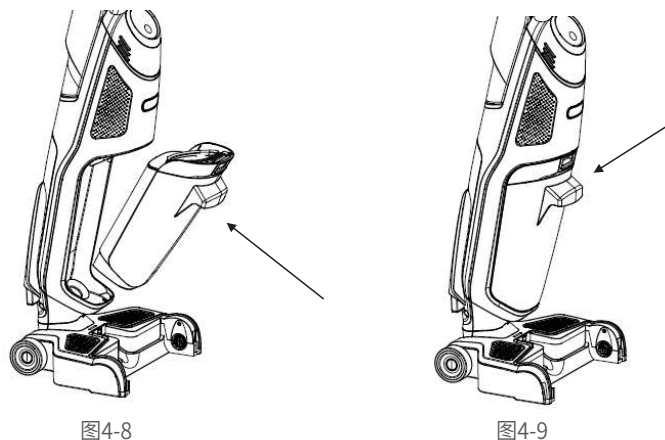

## 产品组装


### 滚刷组件的组装

把滚刷组件按图4-10所示方向插入地刷组件对应位置(图片所示),地刷组件设有卡扣定位,插入后听到“咔”一声即完成组装如图4-11。

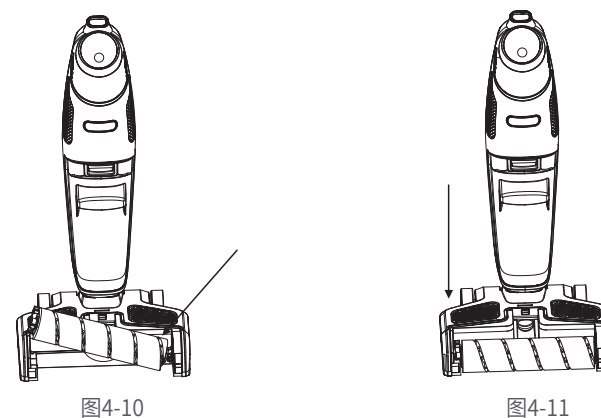

### 可视窗组件的组装

把可视窗组件按图4-12所示方向插入地刷组件对应位置(图片所示),可视窗组件设有卡扣定位,插入后听到“咔”一声即完成组装如图4-13。

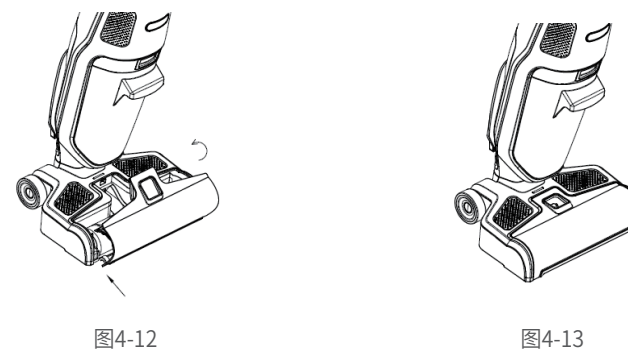

充电与自清洁说明

- 1.把电源适配器按图示方向插入电源插板(图5-1);
- 2.把整机按(图5-3)所示放入充电座组件,此时机身显示板电量提示灯亮,机器进入充电状态,电量提示灯全部关闭时充电完成(图5-2)。清洁完成后,将使用后的机器放入充电座上,确保清水箱水量足够,按下自清洁功能键,设备进入自清洁模式,30秒钟完成清洗和甩干,然后自动停止。
- 3.完成充电后,关闭电源开关,拔出电源适配器。

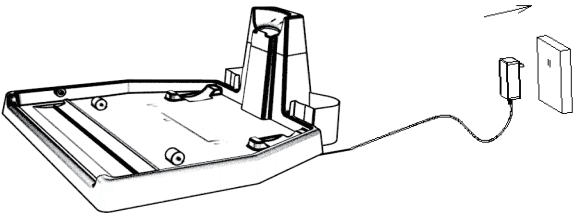


图5-1

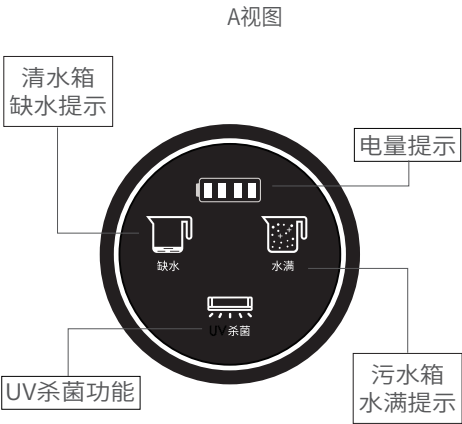


图5-2

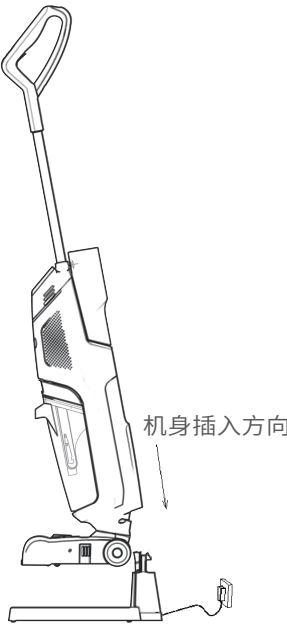


图5-3

清洁方法

注意:《自清洁功能》必须在充电状态下才能选择。

污水箱、滚刷的清洁方法

第1步:用手扣进污水箱扣手部分,往下按污水箱按键即可取出污水箱;

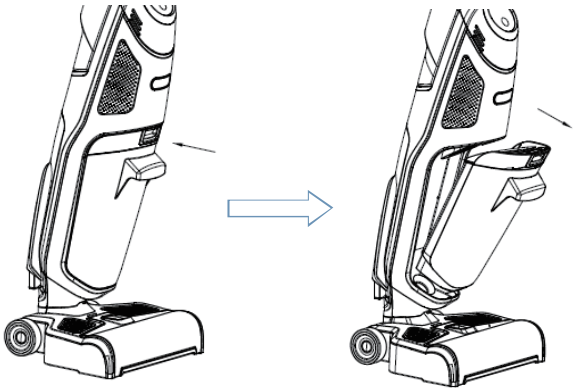


图6-1

图6-2

第2步: 打开污水箱盖,取出污水箱盖部分,把污水倒出;

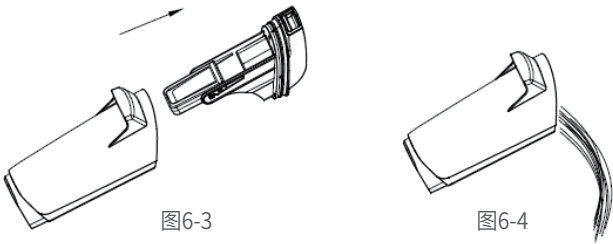


图6-3

图6-4

第3步: 将污水箱用水清洗干净即可;

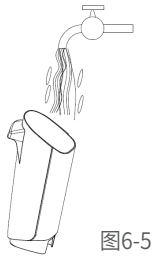


图6-5

清洁方法

第4步：自清洁完成后按4.4与4.5的描述相反顺序取出滚刷组件，按图示方向放置于充电座指定位置放，整机应放置于通风良好的地方，避免阳光直射。

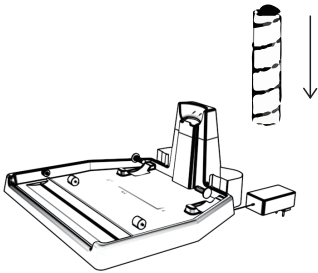


图6-6

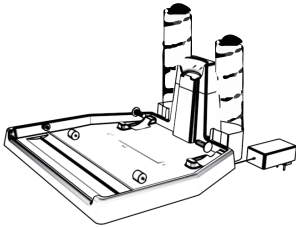


图6-7

产品规格

产品名	吸拖一体机(带真空吸尘器功能)
型号名	XDJ-001B、XDJ-001L
工作电压	DC36V
电池容量	2600mAh
整机功率	256W
适配器参数	42V --- 850mA
污水箱容量	450ml
清水箱容量	750ml
产品净重	4.7kg
产品毛重	8.0kg
产品尺寸	282(长)×325(宽)×1160(高)mm
彩盒尺寸	695×328×288mm
外箱尺寸	710×338×298mm


产品规格

故障申报之前应确认事项

有时消费者会因不是产品故障的现象申报维修，  
请确认以下事项，解决简单的问题及判断是否是产品故障，来减少维修的不便

异常现象	确认事项
产品不动作	--请确认电量指示灯是否提示需要充电 --请确认机器是否处于直立状态(直立状态产品不工作) --请检查滚刷是否安装到位。
吸力下降, 有异响	--请确认吸入口是否有异物 --请确认污水箱组件是否安装到位 --请确认污水箱组件及过滤海绵是否清洁干净

环保型双酚

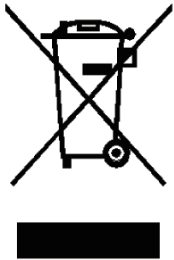

你可以帮助保护环境！  
请记住遵守当地法规：将不工作的电气设备交给适当的  
废物处理中心。

产品执行标准:G B17625.1-2012 ；GB4343.1-2018 ；G B4706.1-2005 ；G B4706.7-2014

有害物质成份表

为满足《电器电子产品有害物质限制使用管理办法》要求, 以下提供的是电器产品部件名称以及可能含有的有害物质信息。

部件名称	有毒有害物质成份含量					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电机铜环	×	○	○	○	○	○
轴承	×	○	○	○	○	○
充电器	×	○	○	○	○	○

“○”：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572-2011规定的限量要求以下。

“×”：表示该有害物质至少在该部件的某一均质材料中的含量由于现有技术工艺限制而超出GB/T 26572-2011规定的限量要求。

在上述表格中, 标注“x”的部件满足欧盟RoHS 2.0法规---欧盟电子电器产品中限制使用某些有害物质的 2011/65/EU 法规。



环保使用年限

备注：所有在中国销售的电器电子产品必须标有环保使用期限的标识。该标识的环保使用期限是指在正常使用条件 和温度'湿度，并且不包括电池等耗材情况下的使用期限。

服务条款

- 产品保修规定
  - 1、产品自购买之日起（以发票日期为准），根据三包法规定，在保修期内享受免费维修。延保产品以SCHNEIDER官方发布的相关规定执行。
  - 2、产品保修时，须提供购买产品的有效凭证和产品出厂编号；
  - 3、保修期内，发生下列情况，不属于免费保修范围：
    - 用户使用、维护、保管不当造成损坏的；
    - 非SCHNEIDER授权服务网点安装、拆卸、维修而造成损坏的（包含用户自行安装、维修损坏的）；
    - 不能出示有效凭证的，有效凭证型号与修理产品型号不符、不清晰或经涂改的；
    - 因不可抗力造成损坏的。
- 如有疑问，请拨打SCHNEIDER官方热线：400-601-8998

产品保修卡

请妥善保存此卡、发票。

从购机开具发票之日起，如发生非人为因素引起的故障，经我企业维修人员检查核实，保修期内凭此卡和发票可享受免费保修服务。超过保修期或不属于免费保修范围，仍竭诚为您提供优质的售后服务。

欢迎用户质量监督和服务监督。

请您认真填写

用户姓名		购买日期		发票编号	
地 址				邮 编	
产品型号		出厂编号			
维修记录栏（由维修员填写）					
维 修 内 容		维修员签名	用户签名	日期	
维修部地址			电 话		


产品装箱单

名称	数量	备注	名称	数量	备注
主机	1件		使用说明书	1本	含保修卡
手柄	1件		内箱	1个	
充电底座	1件		外箱	1个	
适配器	1件	已安装好	吊牌	1张	挂在机器上
净水箱	1件		合格证	1张	挂在机器上
清洁液	1瓶				

以上装箱单仅供参考，具体以箱内实物为准。

## KNOW YOUR VACUUM CLEANER

### Know your vacuum cleaner

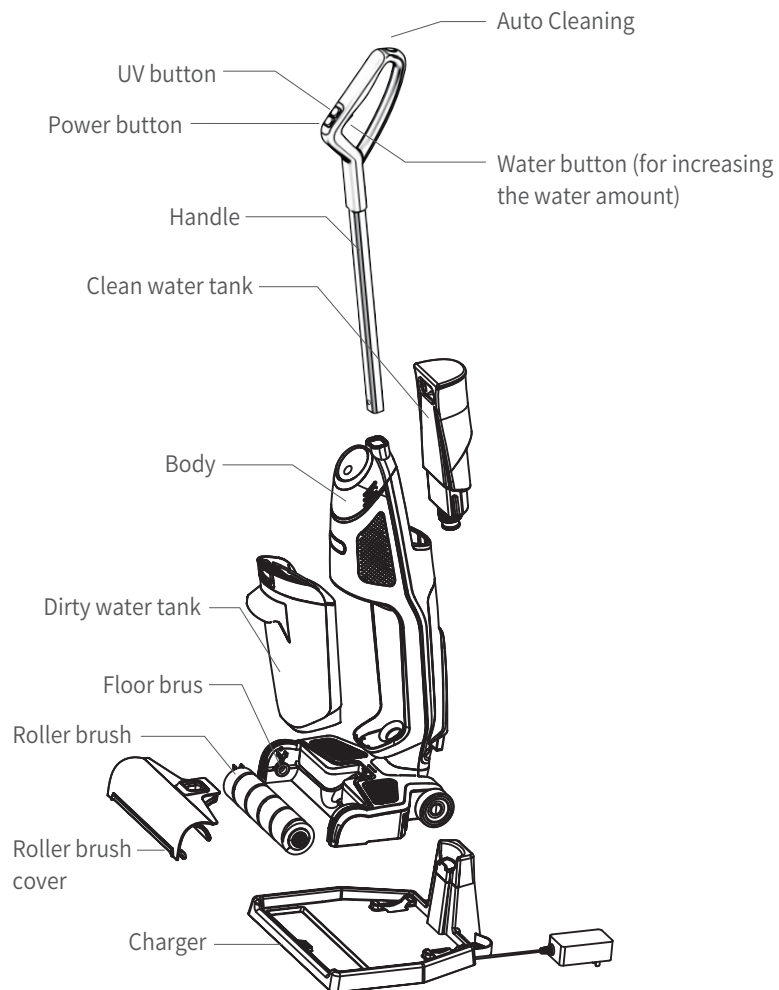


- 1、Handle hand "ON / OF": press once to turn on, then press once to turn off all functions;
- 2、The second button on the handle is the "UV" light switch: press once to turn on, then press once to turn off, and this button can turn on the UV light when the machine is charging on the charging base.
- 3、Button under the handle: press once to open, release side to close, press continuously to spray water continuously;


## INSTALATION OF THE APPLIANCE

### Instalation of the appliance

#### INSTRUCTION FOR FLOOR BRUSH

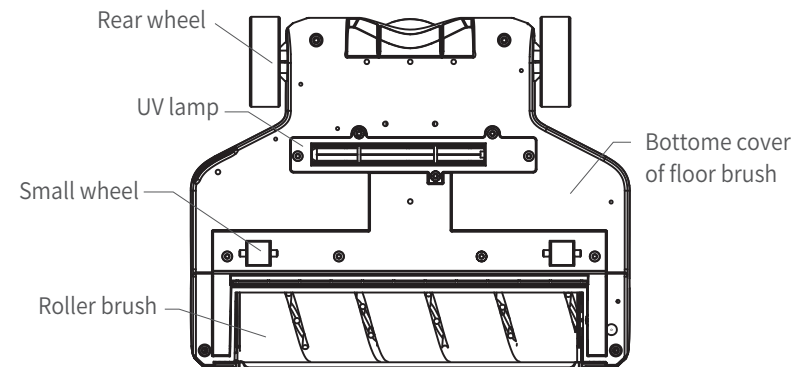

#### INTRODUCTION FOR CONTROL PANEL

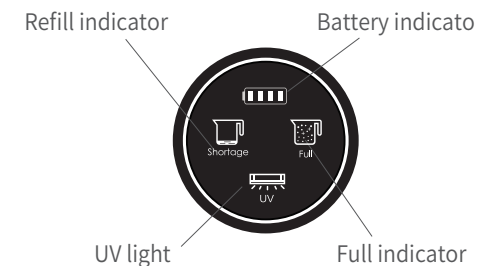

#### INSTALLATION OF THE APPLIANCE

The appliance is relatively large. For the convenience of transportation and storage, the charger, the handle and the body are packaged separately. Please follow the steps below to install the appliance when it is used for the first time.

#### INSTALLATION FOR THE BODY AND THE HANDLE

Insert the handle into the corresponding position at the top of body by following the direction as shown in Fig 1. There is a fastener at the handle, and the handle is installed well in position after you hearing a sound of "click" (see Fig.2).

## INSTALLATION OF THE APPLIANCE

### Instaliation of the appliance



Fig.1



Fig.2

#### INSTALLATION FOR THE BODY AND THE CLEAN WATER TANK

Turn the lid of clean water tank counterclockwise as shown in Fig.3, and then fill the clean water tank with pure water as shown in Fig.4. The water level must not exceed the maximum water level marked on the clean water tank. And then turn the lid of clean water tank clockwise as shown in Fig.5 to tighten it. After finish filling water, make the tank lid downwards and then insert the clean water tank into the corresponding position of the body as shown in Fig.6. There is a fastener inside the body, and the clean water tank is installed well in position after you hearing a sound of "click" (see Fig.7).

Counterclockwise



Fig.3



Fig.4

Clockwise



Fig.5



Fig.6

 


Fig.7

## INSTALLATION FOR THE ROLLER BRUSH

### Instaliation for the roller brush

#### INSTALLATION FOR THE BODY AND THE DIRTY WATER TANK

Insert the dirty water tank into the corresponding position of the body as shown in Fig.8. There is a fastener at the dirty water tank, and the dirty water tank is installed well in position after you hearing a sound of "click" (see Fig.9).

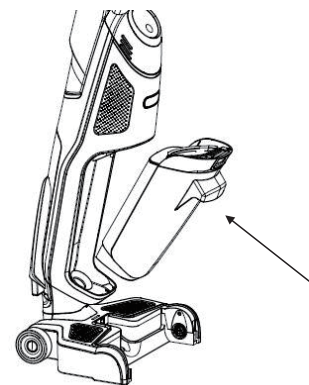


Fig.8

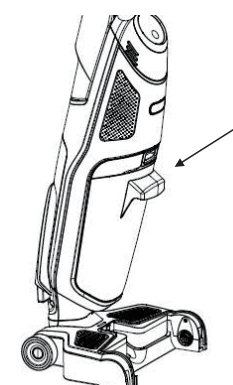


Fig.9

#### INSTALLATION FOR THE ROLLER BRUSH

Insert the roller brush into the corresponding position at the floor brush as shown in Fig.10. There is a fastener at the floor brush, and the roller brush is installed well in position after you hearing a sound of "click" (see Fig.11).

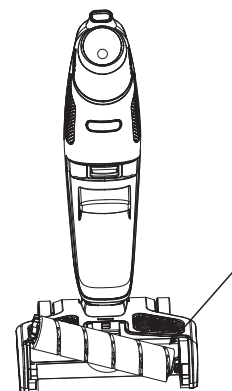


Fig.10

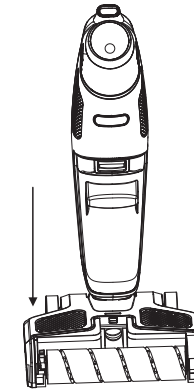


Fig.11



## Operation

### INSTALLATION FOR THE ROLLER BRUSH COVER

Insert the roller brush cover into the corresponding position at the floor brush as shown in Fig. 12. There is a fastener at the roller brush cover, and the roller brush cover is installed well in position after you hearing a sound of "click" (see Fig.13).

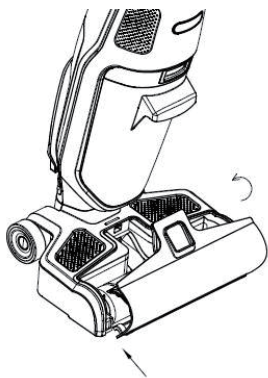


Fig.12



Fig.13

### CHARGE THE APPLIANCE

- 1.Insert the adapter of charger into the power outlet (see Fig.14).
- 2.Put the appliance onto the charger, and the battery indicator turns on and the appliance enters into the charging condition. And the charging is finished after the battery indicator turns off (see Fig.15).
- 3.After finish charging, unplug the adapter.

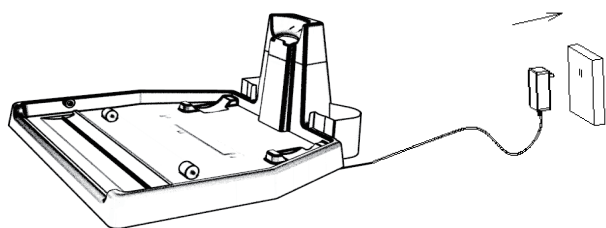


Fig.14

## Operation

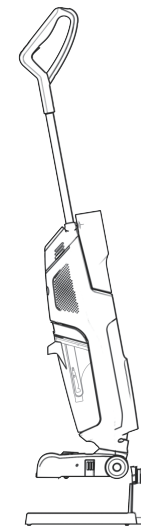


Fig.15

### OPERATING THE APPLIANCE

Before using the appliance, make sure the appliance is charged well.

- 1.Remove the appliance from the charger and adjust the appliance to the normal working condition from the upright position.

NOTE: The appliance can not work when it is placed upright

- 2.Press the Power button, the indicators and the light ring on the control panel illuminate for a while, then only the Battery indicator illuminates, and the appliance starts to work and there is water spraying out from the appliance. If you want to activate the UV sterilization function, press the UV button, then the UV indicator turns on.

- 3.If you want to increase the water amount, press the Water button, and more water will be sprayed out from the appliance, and then you can clean the place where needs more water for cleaning.

- 4.The Refill indicator will blink in red if the clean water tank is lack of water, please refill the clean water tank with pure water in time.

- 5.The Full indicator will blink in red if the dirty water tank is full, please empty the dirty water tank in time.

## OPERATION

### Operation

6.If you want to activate the auto-clean function to dean the appliance, follow the operation as below. Firstly, put the appliance onto the charger to perform charging, and then press the Auto clean button to perform auto cleaning for 30 seconds. And the light ring will keep illuminating during the auto-clean process.

NOTE: The auto-clean function can be only activated when the appliance is being charged.

#### CLEANING THE DIRTY WATER TANK AND THE ROLLER BRUSH

1. Grasp the fastener of dirty water tank and then press the button of the dirty water tank downwards to remove the dirty water tank (see Fig.16).

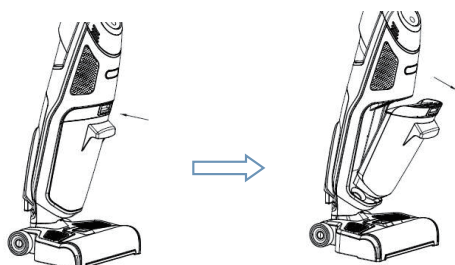


Fig.16

2. Remove the lid of dirty water tank and then empty the dirty water tank (see Fig.17).

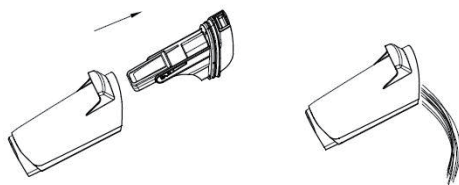


Fig.17

## PRODUCT SPECIFICATION

### Product specification

3. Rinse the dirty water tank with clean water (see Fig.18)



Fig.18

4. Activate the Auto dean" function by following the operation as above to clean the roller brush, then remove the roller brush by followi ng the reverse operation mentioned in the section of "FNSTALLATION FOR THE ROLLER BRUSH". And then store the roller brush at the corresponding position of the charger (see Fig.19). The appliance should be stored at a place with good draft and without exposure to the direct sunlight.

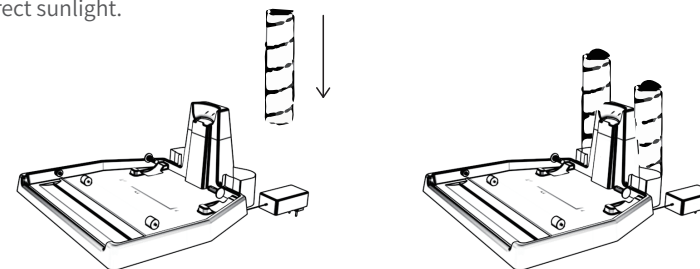


Fig.19

#### REPLACEMENT OFTHE ROLLER BRUSH

The roller brush should be replaced every 6 months, which may vary depending on the operating environment and the running time.

#### PRODUCT SPECIFICATION

Product name	Cordless Wet Dry Upright Vacuum and Mop Cleaner
Model	XDJ-001B、 XDJ-001L
Battery Capacity	2600mAh
Working Voltage	DC36V/ Lithium
Power	256W

# TROUBLESHOOTING

## Trobleshooting


Specification of adapter	42V=850mA
Capacity of dirty water tank	450ml
Capacity of clean water tank	750ml
Netweight	4.7kg
Gross weight	8.0kg
Product size	282 (L)×325 (W)×1160 (H) mm
Giftbox size	695×328×288mm
Packing size	710×338×298mm

### TROUBLESHOOTING

If you have found some abnormal conditions, you can check the items shown in the following table before contact authorized agency for repair.

Abnormal condition	Items to be checked
The vacuum cleaner cannot work	<ul style="list-style-type: none"> <li>-Please check if the appliance needs to be charged.</li> <li>-Please check if the appliance is placed upright. The appliance will network if it is placed upright.</li> <li>-Please check if the roller brush has been installed well in position.</li> </ul>
The suction force is degenerated and abnormal noise can be heard	<ul style="list-style-type: none"> <li>-Please check if there are foreign objects at the air inlet.</li> <li>-Please check if the dirty water tank has been assembled well.</li> <li>-Please check if the dirty water tank and filtration cloth has been cleaned.</li> </ul>

### ENVIRONMENT-FRIENDLY DIPOSAL

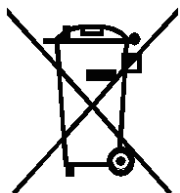

You can help protect the environment!  
Please remember to respect the local regulations:  
Hand in the non-working electrical equipments to an appropriate waste disposal centre.

## Terms Of Service

### ● Product Warranty Provisions

1. From the date of purchase (the invoice date shall prevail), the product shall enjoy free maintenance within the warranty period according to the provisions of the Three Guarantees Law. The extended warranty products shall be implemented in accordance with the relevant regulations officially issued by SCHNEIDER.
2. When the product is under warranty, the valid certificate of purchase and the factory number of the product shall be provided.
3. During the warranty period, the following circumstances do not belong to the scope of free warranty:
  - The damage is caused by improper use, maintenance or storage of the user;
  - Damage caused by installation, disassembly and maintenance of service outlets not authorized by Schneider (including the damage caused by the user's own installation and maintenance);
  - Fail to produce the valid certificate, or the model number of the valid certificate is inconsistent with, unclear or altered with the model number of the product to be repaired;
  - The damage is caused by force majeure.

- If you have any questions, please call the official Schneider hotline: 400-601-8998

## Warranty Card

Please keep this card and invoice properly.

From the date of invoicing the purchase machine, if there is any fault caused by non-human factors, the maintenance personnel of our company will check and verify it. During the warranty period, we can enjoy free warranty service with this card and invoice (the bulb does not belong to the warranty scope). More than the warranty period or does not belong to the scope of free warranty, still dedicated to provide you with quality after-sales service.

Welcome user quality supervision and service supervision.

### Please fill in carefully

Name		Date of purchase		Invoice No.	
Address				Zip Code	
Product model		Factory number			
Maintenance Record Box (to be filled out by maintenance personnel)					
Content			Signature of repairman	sign	date
Maintenance Department address			Telephone		

## PACKING LIST OF THE PRODUCT

### Packing list of the product

Name	Qty	Remark	Name	Qty	Remark
Host	1PCS		Operating instruction	1PCS	Including warranty card
Handle	1PCS		Inner box	1PCS	
Charging base	1PCS		Outer box	1PCS	
Adapter	1PCS	Installed	Tag	1PCS	Hang it on the machine
Clean water tank	1PCS		Certificate of soundness	1PCS	
Cleaning fluid	1PCS				

The above packing list is for reference only, the specific material in the box shall prevail.

SCHNEIDER CONSUMER IP

France SCHNEIDER(China)Brand Operator

Guangzhou Kelong Household Brand Management co., LTD

- SCHNEIDER(China)Official Website: [www.schneiderhome.cn](http://www.schneiderhome.cn)

- Service Hotline: 400-601-8998

- Address: No.95, Yingbin Avenue, Huadu District, Guangzhou



WeChat  
official account